


1. Montage ohne Highboard

1.1

CLW SW
CL AW (WE / LA/ GP / SE)

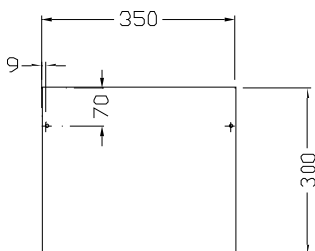

1.2



Wand prüfen, ob beiliegende Dübel geeignet sind!
Wall check whether attached rawl plugs are suitable!



6 mm

